

WIRELESS PROTM

AND

WIRELESS GOTM

CAMERA SETUP GUIDELINES | NIKON Z30

Before you start

This walkthrough will help you ensure optimal compatibility between your Wireless GO or Wireless PRO system and your camera, to ensure your audio recordings are clear and clean.

You should connect your receiver to your computer, start the RØDE Central app, and select the preset for the Nikon Z30 to ensure the settings on your microphone match those for your camera.

If you do not have access to RØDE Central, make sure you manually set the gain on your receiver to -6dB using the 'dB' button on the receiver.

Important information

While these settings have been designed to work well in most situations, you should always check your levels manually using the meters on your camera.



STEP 1

Make sure the switch on the back of the camera (just to the right of the hot shoe) is switched to the 'Movie Camera' symbol.




STEP 2

Press the 'MENU' button on the back of the camera, in the bottom right corner.




STEP 3

Scroll to the CAMERA symbol on the left-hand column, then press RIGHT.

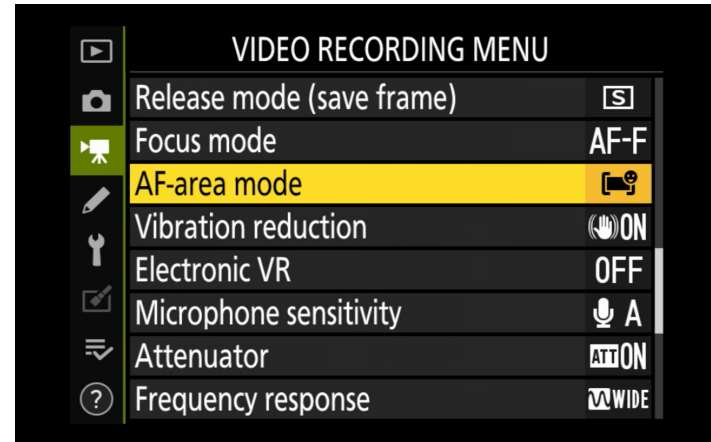


STEP 4

Scroll down to 'Attenuator', and press RIGHT.

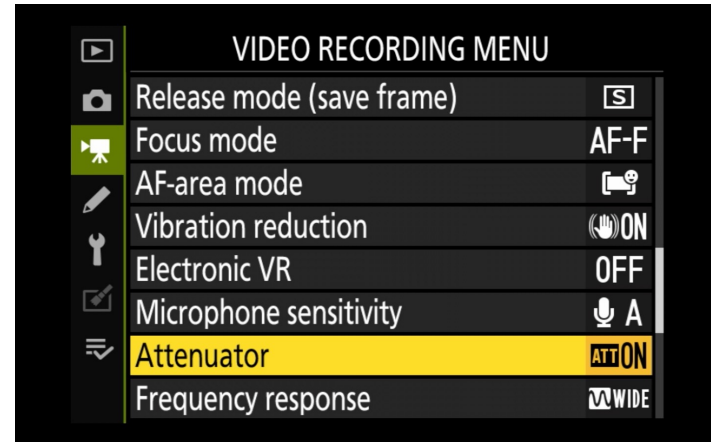


STEP 5

Scroll to 'Disable' and press the 'OK' button to select.

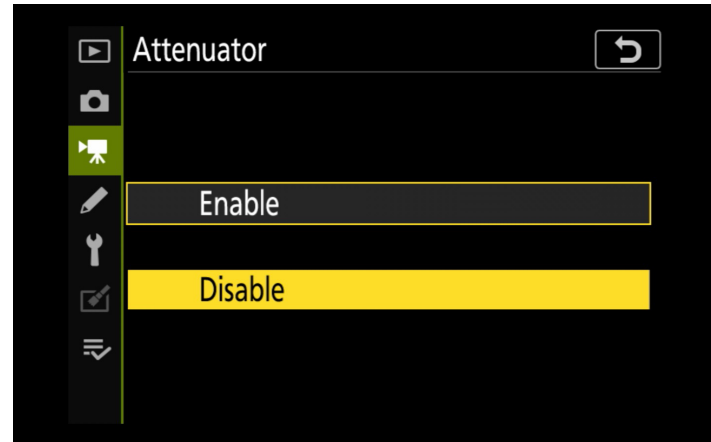


STEP 6

Scroll to 'Microphone Sensitivity' and press RIGHT.

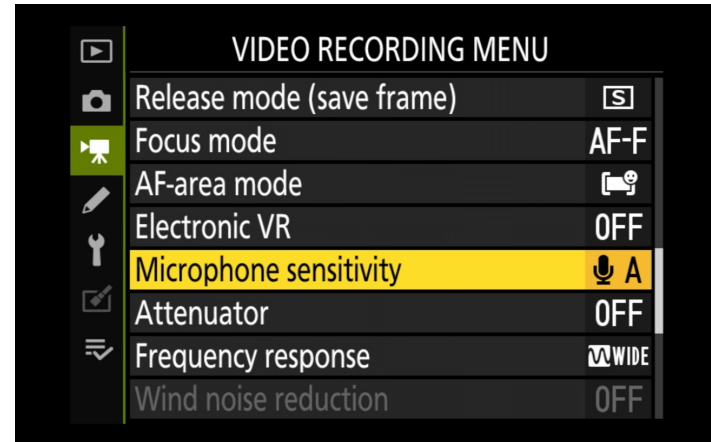


STEP 7

Scroll to 'Manual' and press RIGHT.

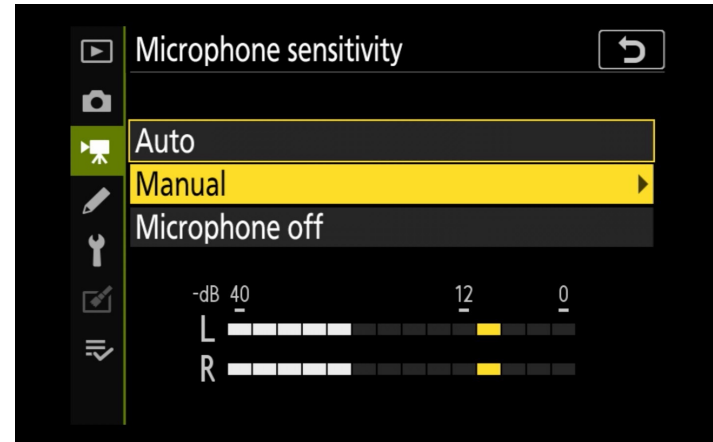

STEP 8

Keep pressing DOWN until the internal volume level is set to '3', then press the 'OK' button to confirm.

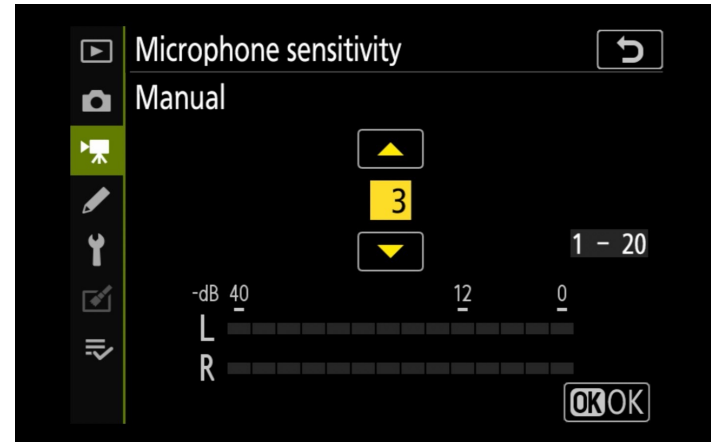

YOU'RE READY TO GO!

Your camera is now set up and ready to go.

Happy filming!

